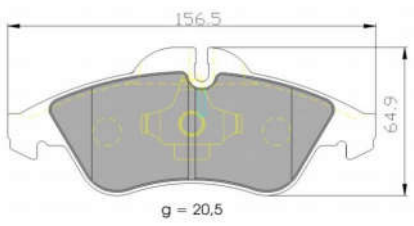
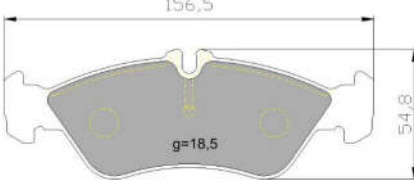
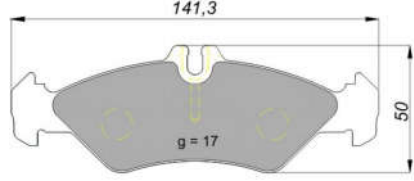
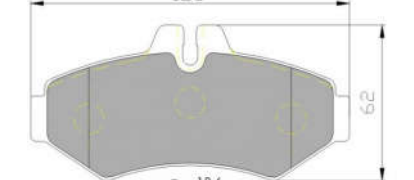
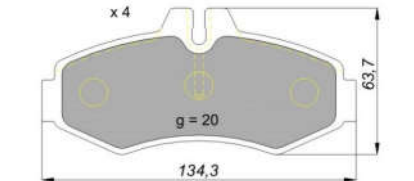
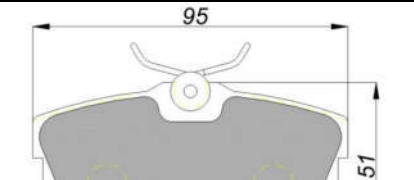
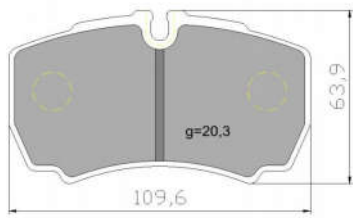
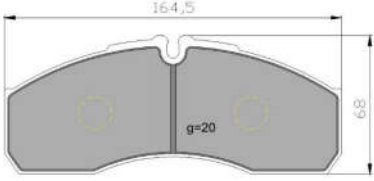
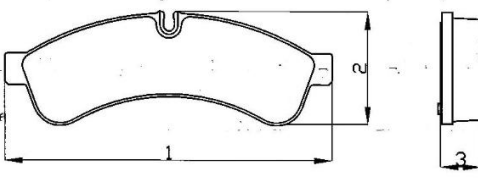
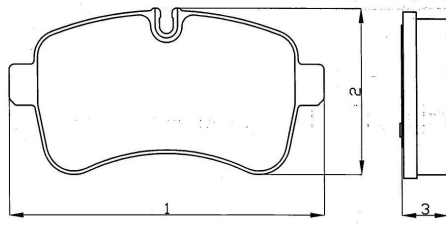
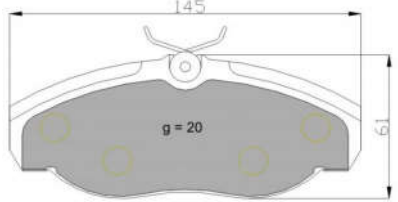
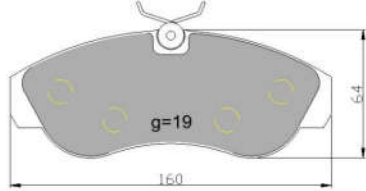


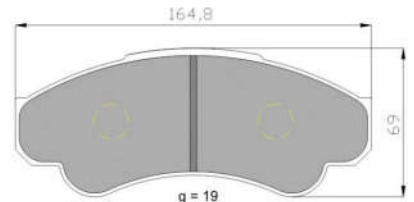
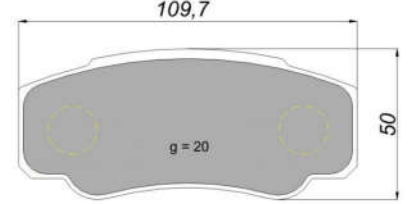
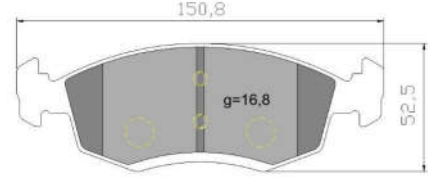
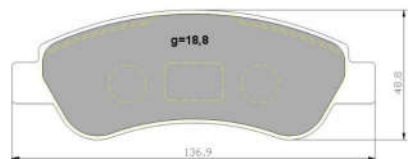
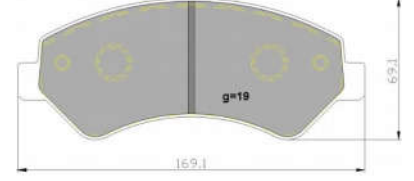
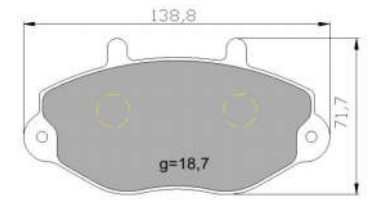
DC/580/01.11.2016

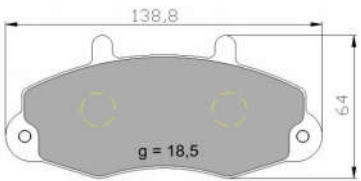
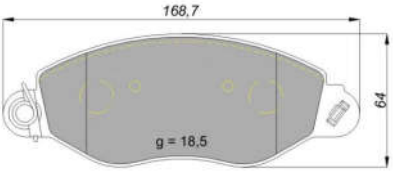
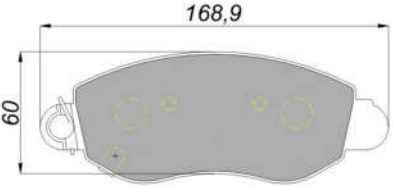
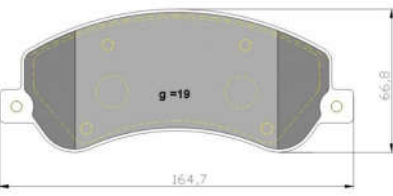
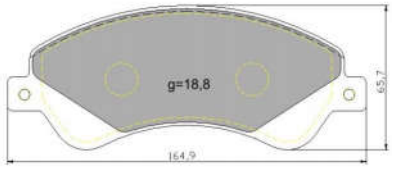
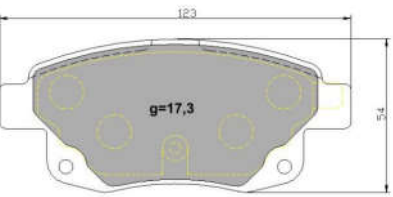
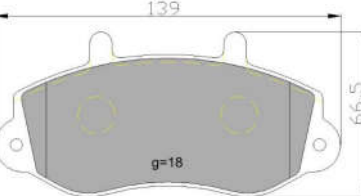
DISC BRAKE PADS LIGHT COMMERCIAL VEHICLES

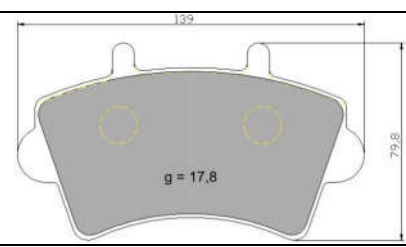
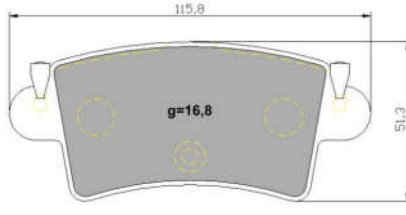
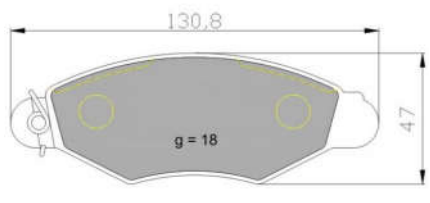
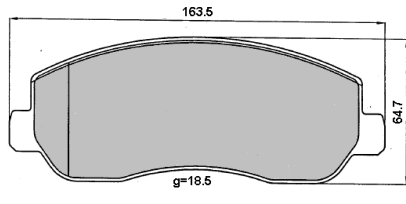
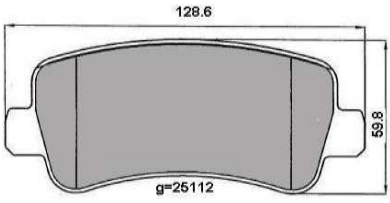
N R	Fermit reference	WVA equivalent	Type of vehicle/ Sizes (mm) (Length x width x thickness)mm	Drawing
MERCEDES, VOLKSWAGEN				
1	FER.G 21576 FA30900545	21576 21577 23990 23991	Front: Mercedes Sprinter 2t 208,210,211,212,213,214,216,Merceds Sprinter3t 308,310,311,312,313,314,316,Mercedes Vito 108,113,110,114, VWLT28-35 II bus 156,5 x 64,9 x 20,5	
2	FER.G 21592 FA30905365	21592 21593 21661	Rear: Mercedes Sprinter 3t VW LT 28- 2002 - 156,5 x 54,8 x 18,5	
3	FER.G 21621 FA30905170	21621 21622	Rear: Mercedes Sprinter 2t 208,210,211,212,213,214,216, VW LT28-35 II,28-46 I 141,3 X 50 X 17,0	
4	FER.G 23021 FA30900556	23021 23535	Rear: Mercedes Sprinter 3t-308, 310, 311, 312, 313, 314, 316, VWLT28-35 II bus 126 x 62 x 18,6	
5	FER.G 23022 FA30905270	23022	Front: Mercedes Sprinter, V-Class, Vito 134,3 x 63,7 x 20,9	
6	FER.G 23224 FA30905275	23224 23446	Rear : VW TRANSPORTER IV(70XA , 70XB , 70XC , 70XD), VW SHARAN 95 x 51 x 15	

7	FER.G 29076 FA30905161	29076 29153	Front/Rear: Mercedes Sprinter 4t 408, 410, 411, 412, 413, 414, 416; VW LT28-46 II Sist franare Wabco -Perrot	
8	FER.G 29190 FA30905385	29190	Rear : Mercedes Sprinter 3,5 to 309CDI, 315CDI, 318CDI, 324,211 CDI, 209CDI, 213CDI, 215CDI, 218 CDI	
9	FER.G 29192 FA30905395	29192	Front: Mercedes Sprinter 3,5 to 309CDI, 315CDI, 318CDI, 324,211 CDI, 209CDI, 213CDI, 215CDI, 218 CDI, Mercedes Vito 109CDI, 111 CDI, 119CDI, 120CDI, 122CDI	
10	FER.G 29200 FA30905390	29200	Front : MERCEDES Sprinter 5 to 509, 511, 515, 518 CDI	
11	FER.G 29217 FA30905380	29217	Rear : MERCEDES Sprinter 5 to 509, 511, 515, 518 CDI	
IVECO				
12	FER.G 21049 FA30904666	21049 21048 21620	Front: Iveco Daily 40-80,35- 80,35-10,40-10 Renault Master bus 28-35,30 , B70,B90	
13	FER.G 07.5944.10 (29121) FA30905045	29121 29374	Front/Rear: IVECO Daily 30-8, 35-10, 35-8,40-10, 49-10,49-12, 59-12 , Iveco Daily II35S , 50C,65C Spate: Renault Mascott 160.55.160.35.160.65	

14	FER.G 29123 FA30900027	29123	Spate: IVECO Daily II 29L, 35S, 50C11 109,6x63x9x20,3	
15	FER.G 29160 FA30905350	29160 29161	Front/Rear Iveco Daily II 35, 50, 65 C15, 2001- Renault Mascott 110-140, 5-6 t, Mercedes Sprinter 616 - 6t 164,5 x 64 x 20	
16	FER.G 29231 FA30905497	29231	Rear: IVECO Daily III 65C14G, K, V; 65C17K,V IVECO Daily 65C18V, V/P, Manufacturing 05.2006- 184x64,6x22,8	
17	FER.G 29232 FA30905495	29232	Rear: IVECO Daily III 29L10,12,14; 35C10, 12, 15, 18; 35S14; 40C10,12, 15, 18 50C15,18 An fabricatie:05.2006 141,2x72,8x21	
18	FER.G 21797 FA30905175	21797 21798 21627	Front: Fiat Ducato bus 230, Peugeot Boxer 230, : Citroen Jumper bus 145 x 61 x 19,7	
19	FER.G 21799 FA30903347	21799 21629	Front : Fiat Ducato bus 230, Peugeot Boxer 230, : Citroen Jumper bus 160 x 64 x 19	

20	FER.G 23858 FA30905305	23858 23859 23919	Front: FIAT Ducato 244, CITROEN Jumper 244, PEUGEOT Boxer 244	
21	FER.G 23860 FA30905310	23860 23861 23921	Rear: FIAT Ducato 244, CITROEN Jumper 244, PEUGEOT Boxer 244	
22	FER.G 23842 FA30900035	23842 20907	Front : FIAT DOBLO(119),DOBLO CARGO,PALIO, Logan MCV,VAN	
23	FER.G 24465 FA30903340	24465	Rear: FIAT Ducato bus Multijet,An.07.06 - ; CITROEN Jumper bus HDi 100, 120,160- ; PEUGEOT Boxer bus HDi 100,120,160	
24	FER.G 24466 FA30903350	24466 24467	Front: FIAT Ducato bus Multijet ; CITROEN Jumper bus HDi 100,120,160, An 04.06 - ; PEUGEOT Boxer bus HDi 100,120,160,	
FORD TRANSIT				
25	FER.G 21469 FA30903325	21469	Front: Ford Transit bus (E--)	

26	FER.G 21470 FA30903303	21470	Front: Ford Transit bus E(--) 138,8 X64 X 18,5	
27	FER.G 23434 FA30905300	23434 23435 23436	Front: Ford Tranzit bus 2000- FD_FB_FS_FZ_FC 2.1DI, 23.16V, 2.4DI, 2.4TDE 168,7 x 64 x 18,5	
28	FER.G 23577 FA30905165	23577 23578 23579	Front: Ford Transit bus FB_Y, FD_Y, FM_Y 168,9 X 65 X 18,5	
29	FER.G 24484 FA30905412	24484	Front : FORD TRANZIT , Manufacturing 07.06 – 164,7x66,8x19	
30	FER.G 24485 FA30905405	24485	Front: FORD TRANZIT Manufacturing 07.06 – 164,9x65,7x18,8	
31	FER.G 24486 FA30905410	24486	Rear : FORD TRANZIT Manufacturing 07.06 – 123x54x17,3	
RENAULT				
32	FER.G 23302(0160) FA30903267	23302 21312	Front : Renault Master II g=18	

			139x66,5x19,5	
33	FER.G 23613 FA30902188	23613	Front RENAULT Master II 1,9; 2,2; 2,5; 2,8 dTi, dCi ; RENAULT Master III 2,5 ; 3,0 dCi; OPEL Movano 2,2; 2,5; 2,8 DTI 139 x 79,8 x 11,8	
34	FER.G 23669 FA30902189	23669	Rear: RENAULT Master II 1,9; 2,2; 2,5; 2,8 dTi, dCi ; RENAULT Master III 2,5 ; 3,0 dCi; OPEL Movano 2,2; 2,5; 2,8 DTI 115,8 x 51,3 x 16,8	
35	FER.G 21978 FA30900534	21978, 21979,	Front : Renault Kangoo, Kangoo Rapid 130,8x47x18	
36	FER.G 25147	25147 (25165)	Front: Renault Master IV 2010; Master III Box/Bus/Platform (JV) 2.3 dci 2011; Nissan NV400 Bus/Box/Platform 2.3dCi; Opel Movano B Box/Bus/Platform 2.3 CDTi,	
37	FER.G 25112	25112	Rear: Renault Master IV 2010; Master III Box/Bus/Platform (JV/FV) 2.3 dci 2010; Opel Movano B Box/Platform 2.3 CDTi	

Disc brake pads are delivered in set of 4 pcs. We can deliver the brake pads with wear indicator.

For more technical details, please consult our electronic catalogue available on www.fermit.ro or contact us.

FERMIT SA – Sales Department
Phone: 0040 238561465
e-mail: marketing@fermit.ro;info@fermit.ro
Mobile: 0040 730 330102
Fax: 0040 238566495