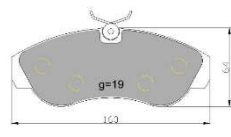
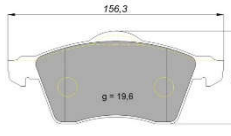
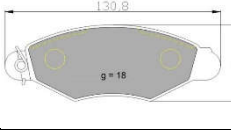
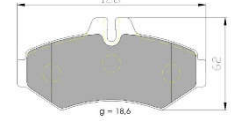
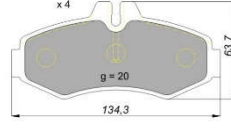
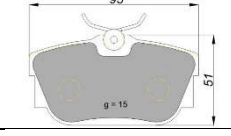
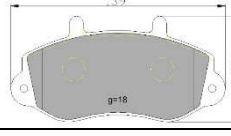
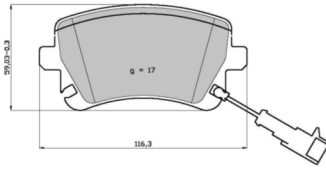
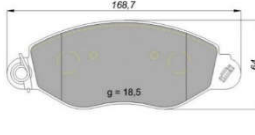
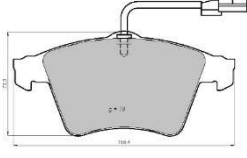














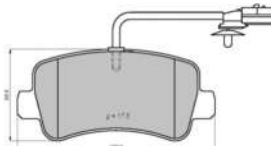
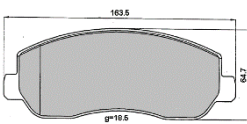
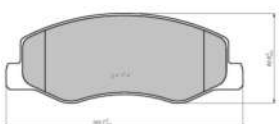
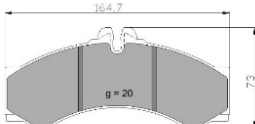
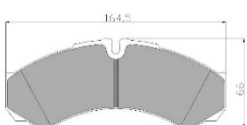


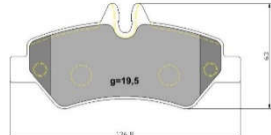
DC/574/3 10.09.2021

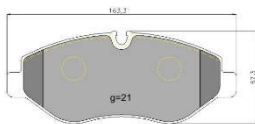
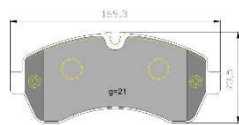
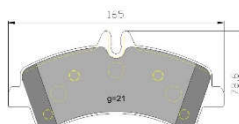
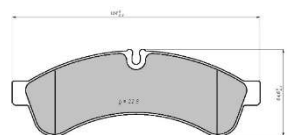
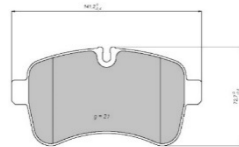
**PLĂCUTE FRANĂ PENTRU
UTILITARE, MICROBUZE**

Nr.	Referinta Fermit	VVA	Tipul vehiculului/ Dimensiuni (mm) (Lungime x latime x grosime)	Schita reper
1	FER.G 20488 FA30903281	20488 20489	Fata : Renault Trafic T5,T6,T7 108,8 x 58 x 18,5	
2	FER.G 20784 FA30905034	20784 20537 21186	Fata : Mercedes T1 VWLT40-55,28-35 149 x 75 x 18	
3	FER.G 21049 FA30904666	21049 21048 21620	Fata: Iveco Daily I 40-80,35-80,35- 10,40-10 Renault Master I bus 28-35,30 , B70,B90 109,5 x73 x 18	
4	FER.G 21469 FA30903325	21469	Fata: Ford Transit bus (E--) 138,8 X 71,7 X 18,7	
5	FER.G 21470 FA30903303	21470	Fata: Ford Transit (E__) 2.0,2.5 138 x 64 x 18,5	
6	FER.G 21576 FA30900545	21576 21577 23990 23991	Fata: Mercedes Sprinter 2t,Merceds Sprinter3t,Mercedes Vito,VWLT28- 35 II bus 156,5 x 64,9 x 20,5	
7	FER.G 21592 FA30905365	21592 21593 21661	Sparte: Mercedes Sprinter 3t VW LT 28- 2002 – 156,5 x 54,8 x 18,5	
8	FER.G 21621 FA30905170	21621 21622	Sparte: Mercedes Sprinter 2t 208,210,211,212,213,214,216,VW LT28-35 II,28-46 I 141,3 X 50 X 17,0	
9	FER.G 21797 FA30905175	21797 21798 21627	Fata: Fiat Ducato bus 230, Peugeot Boxer 230, : Citroen Jumper bus 145 x 61 x 19,7	

10	FER.G 21799 FA30903347	21799 21629	Fata : Fiat Ducato bus 230, Peugeot Boxer 230, : Citroen Jumper bus 160 x 64 x 19	
11	FER.G 21883 FA30905265	21883 21885 23163	Fata : VW TRANSPORTER IV bus (70XA , 70XB , 70XC , 70XD , 7DB , 7DW) 156,3 x 68 x 19,6	
12	FER.G 21978 FA30900534	21978, 21979,	Fata : Renault Kangoo , Kangoo Rapid 130,8x47x18	
13	FER.G 23021 FA30900556	23021 23535	Spate: Mercedes Sprinter 3t-308, 310, 311, 312, 313, 314, 316, VWLT28-35 II bus 126 x 62 x 18,6	
14	FER.G 23022 FA30905270	23022	Fata: Mercedes Sprinter, V-Class, Vito 134,3 x 63,7 x 20,9	
15	FER.G 23224 FA30905275	23224 23446	Spate : VW TRANSPORTER IV(70XA , 70XB , 70XC , 70XD), VW SHARAN 95 x 51 x 15	
16	FER.G 23302 (0160) FA30903267	23302 21312	Fata : Renault Master II 139x66,5x19,5	
17	FER.G 23326 FA30900064 (cu accesorii)	23326 23882 23883	Spate:VW TRANSPORTER VAutospeciale HK ;Multivan: (HM/HN/HF/EF/EM/EN); Bus (7HB/HJ/EB/EJ/EF); Platform/Chassis(7D/JE/JL/JZ/FD) OE VW 7H0698451 116,3 x 59 x 17	
18	FER.G 23434 FA30905300	23434	Fata: Ford Transit (FD_ , FZ_ , FB_ , FC_) 2.0,2,3,2.4 168,7 x 64 x 18,5	
19	FER.G 23467-23468 (23746) FA30900065 (sesizor)	23467 23468 23746 23747	Fata:VW TRANSPORTER VAutospeciale HK ;Multivan: (HM/HN/HF/EF/EM/EN); Bus (7HB/HJ/EB/EJ/EF); Platform/Chassis(7D/JE/JL/JZ/FD);Fabricatie: 2004- prezent OE VW 7H0698151 155,4 x 73,3 x 19	

20	FER.G 23842 FA30900035	23842 20907	Fata : FIAT DOBLO(119), DOBLO CARGO, PALIO, Logan MCV, VAN 150,4X52,5X17,8	
21	FER.G 23858 FA30905305	23858 23859 23919	Fata: FIAT Ducato 244, CITROEN Jumper 244, PEUGEOT Boxer 244 164 x 69 x 18,2	
22	FER.G 23860 FA30905310	23860 23861 23921	Spate: FIAT Ducato 244, CITROEN Jumper 244, PEUGEOT Boxer 244 109,7 x 50 x 20	
23	FER.G 23577 FA30905165	23577 23578 23579	Fata: Ford Transit bus FB_Y, FD_Y, FM_Y 168,9 X 65 X 18,5	
24	FER.G 23613 FA30902188	23613	Fata RENAULT Master II 1,9; 2,2; 2,5; 2,8 dTi, dCi ; RENAULT Master III 2,5 ; 3,0 dCi; OPEL Movano 2,2; 2,5; 2,8 DTI 139 x 79,8 x 11,8	
25	FER.G 23669 FA30902189	23669	Spate: RENAULT Master II 1,9; 2,2; 2,5; 2,8 dTi, dCi ; RENAULT Master III 2,5 ; 3,0 dCi; OPEL Movano 2,2; 2,5; 2,8 DTI 115,8 x 51,3 x 16,8	
26	FER.G 24465 FA30903340	24465	Spate: FIAT Ducato bus Multijet, An.07.06 - ; CITROEN Jumper bus HDi 100, 120, 160- ; PEUGEOT Boxer bus HDi 100, 120, 160 136,9x48,8x18,8	
27	FER.G 24466 FA30903350	24466 24467	Fata: FIAT Ducato bus Multijet ; CITROEN Jumper bus HDi 100, 120, 160, An 04.06 - ; PEUGEOT Boxer bus HDi 100, 120, 160, 169,1x69,1x19	
28	FER.G 24468/469 FA30900070 FA30900068(ses)	24468 24469	Fata: CITROEN JUMPER 2.0, 2.2 Hdi fabricatie 2006-prezent; FIAT DUCATO 250-290 fabricatie 2006-prezent; PEUGEOT BOXER 2.0, 2.2 Hdi fabricatie 2006-prezent OE Citroen: 425356; 425358 OE Fiat: 71770032; 77364014 Peugeot: 425355; 425356 169,1 x 61,6 x 19	
29	FER.G 24484 FA30905412		Fata : Ford Transit (FD_ , FZ_ , FB_ , FC_) 2,2 164,7 x 66,8 x 19	

30	FER.G 24485 FA30905405	24485	Fata: FORD Manufacturing 07.06 – 164,9x65,7x18,8	TRANZIT 
31	FER.G 24486 FA30905410	24486	Spate : FORD TRANZIT Manufacturing 07.06 – 123x54x17,3	
32	FER.G 25112 FA30905538	25112	Spate: Renault Master IV 2010; Master III Box/Bus/Platform (JV/FV) 2.3 dci 2010; Opel Movano B Box/Platform 2.3 CDTi 128,9 x 59,8 x 17,5	
33	FER.G 25147 FA30905535	25147 (2516 5)	Fata: Renault Master IV 2010; Master III Box/Bus/Platform (JV) 2.3 dci 2011; Nissan NV400 Bus/Box/Platform 2.3dCi; Opel Movano B Box/Bus/Platform 2.3 CDTi, 163,5 x 64,7 x 18,5	
34	FER.G 25172 FA30905542 FA30905541 (SES)	25172	Spate: RENAULT MASTER III KARSAN 163,7 x 62,8 x 17,4	
35	FER.G 29076 FA30905161	29076 29153	Fata/Spate: Mercedes Sprinter 4t 408, 410, 411, 412, 413, 414, 416; VW LT28-46 II Sist franare Wabco – Perrot 164,7 x 73 x 20	
36	FER.G 07.5944.10 (29121) FA30905045	29121 29374	Fata/Spate: IVECO Daily I 30-8, 35- 10, 35-8,40-10, 49-10,49-12, 59-12 , Iveco Daily II35S , 50C,65C Spate: Renault Mascott 160.55.160.35.160.65 164,5 x 66 x 20	
37	FER.G 29123 FA30900027	29123	Spate: IVECO Daily II 29L, 35S, 50C11 109,6x63x9x20,3	
38	FER.G 29160 FA30905350	29160 29161	Fat/Spate Iveco Daily II 35, 50, 65 C15 , 2001- Renault Mascott 110-140 , 5-6 t, Mercedes Sprinter 616 - 6t 164,5 x 64 x 20	
39	FER.G 29190 FA30905385	29190	Spate: Mercedes Sprinter 3,5 to 309CDI, 315CDI, 318CDI, 324,211 CDI, 209CDI, 213CDI, 215CDI, 218 CDI 136,8x63x19,5	

40	FER.G 29192 FA30905395	29192	Fata: Mercedes Sprinter 3,5 to 309CDI, 315CDI, 318CDI, 324,211 CDI, 209CDI, 213CDI, 215CDI, 218 CDI, Mercedes Vito 109CDI, 111 CDI, 119CDI, 120CDI, 122CDI 163,3x67,3x21	
41	FER.G 29200 FA30905390	29200	Fata : MERCEDES Sprinter 5 to 509, 511, 515, 518 CDI 169,3 x73,5 x 21	
42	FER.G 29217 FA30905380	29217	Spate : MERCEDES Sprinter 5 to 509, 511, 515, 518 CDI 165 x 78,6 x 21	
43	FER.G 29231 FA30905497	29231	Spate: IVECO Daily III 65C14G, K, V; 65C17K,V IVECO Daily 65C18V, V/P, Manufacturing 05.2006- 184x64,6x22,8	
44	FER.G 29232 FA30905495	29232	Spate: IVECO Daily III 29L10,12,14; 35C10, 12, 15, 18; 35S14; 40C10,12, 15 ,18 50C15,18 An fabricatie:05.2006 141,2x72,8x21	

Pentru mai multe detalii tehnice, vă rugăm să vizitați catalogul nostru electronic disponibil pe www.fermit.ro

[Echipa Vanzari](#)
[FERMIT SA](#)